

Breakout SIM7600 User Manual



1. Preparation:

Board	BK-SIM7600
Serial tool	sscom32E.exe


AND Wireless : <http://www.and-global.com>
 OEM PCBA : <http://www.buypcba.com>
 Retail Store : <http://www.aliexpress.com/store/605000>
 Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
 Email : info@and-global.com
 Tel : +86-755-28099797

2. Overview

2.1 Module feature

- SIM7600X-H is a complete multi-band LTE-FDD/LTE-TDD/HSPA+/UMTS/EDGE/GPRS/GSM module solution in LCC type which supports LTE CAT4 up to 150Mbps for downlink and 50Mbps for uplink data transfer.
- Stand-alone GPS
- Control Via AT Command, Rich interfaces including UART,USB2.0
- Supply voltage range:3.4v~4.2v, Typ:3.8V
- Dimension: 30x30x2.9mm
- Operation temperature:-40℃ to +85 ℃

2.2 BOARD overview

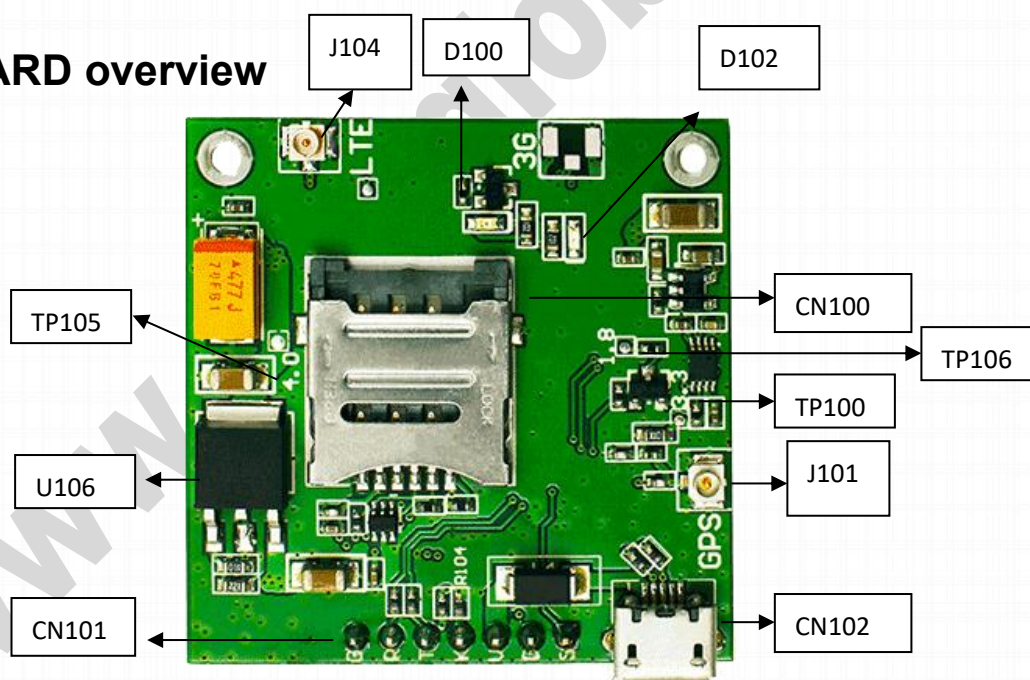

CN100	Micro SIM card socket
CN101	7pin 2.54mm header interface


AND Wireless : <http://www.and-global.com>
 OEM PCBA : <http://www.buypcba.com>
 Retail Store : <http://www.aliexpress.com/store/605000>
 Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
 Email : info@and-global.com
 Tel : +86-755-28099797



AND Technologies Co., ltd


CN102	USB interface
D102	Power indicator(RED)
D100	NET LIGHT indicator(Green)
U106	The power conversion chip
J101	GPS antenna
J104	LTE antenna
TP105	4.0V
TP100	3.3V
TP106	1.8V

2.3 PCBA dimension: 40*40mm

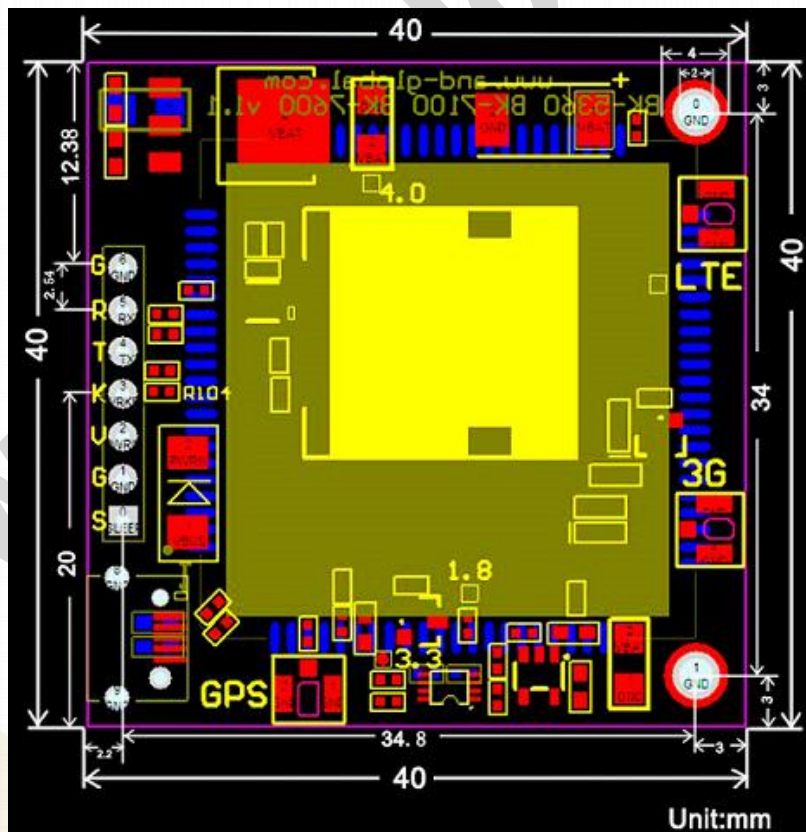

AND Wireless : <http://www.and-global.com>
 OEM PCBA : <http://www.buypcba.com>
 Retail Store : <http://www.aliexpress.com/store/605000>
 Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
 Email : info@and-global.com
 Tel : +86-755-28099797

3. Pin definition

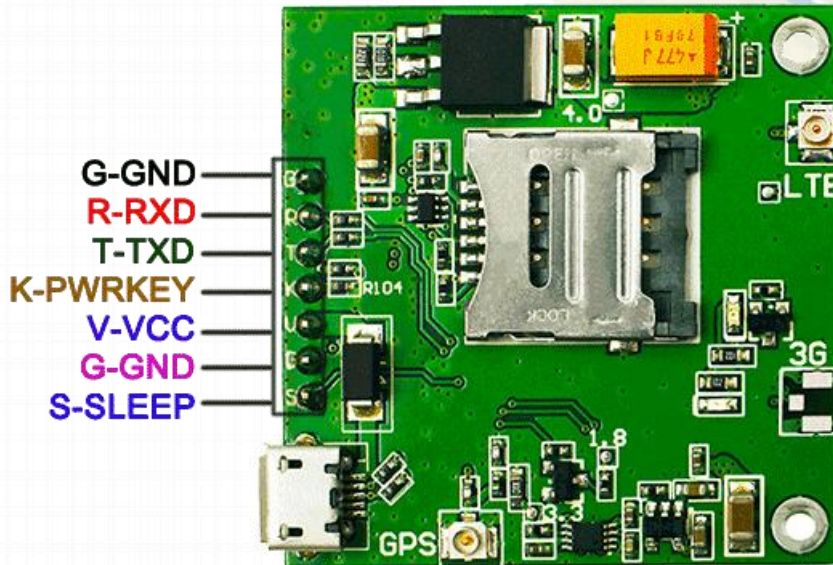

Note: VCC range is from 5.0V to 10V, 5.0V is recommended.

TXD /RXD are 3.3V TTL level which can be directly connected with 3.3V MCU.

3.1 Pin definition of 6pin connector

Pin name	Pin number	Mark on PCB	Description	Comment
SLEEP	0	S	control module into sleep mode	Connect with DTR via Q102
GND	1,6	G	GND	
VCC	2	V	The power supply	5V-10V
PWRKEY	3	K	Power on/off the module	Shorted with GND via R104 by default
TXD	4	T	Transmit Data	TTL Series data Output
RXD	5	R	Receive Data	TTL Series data Input

AND Wireless : <http://www.and-global.com>

OEM PCBA : <http://www.buypcba.com>


Retail Store : <http://www.aliexpress.com/store/605000>

Golden supplier on Alibaba : <http://and-global.en.alibaba.com>

Email : info@and-global.com

Tel : +86-755-28099797

3.2 How to use TXD and RXD (Default baud rate is 115200bps)

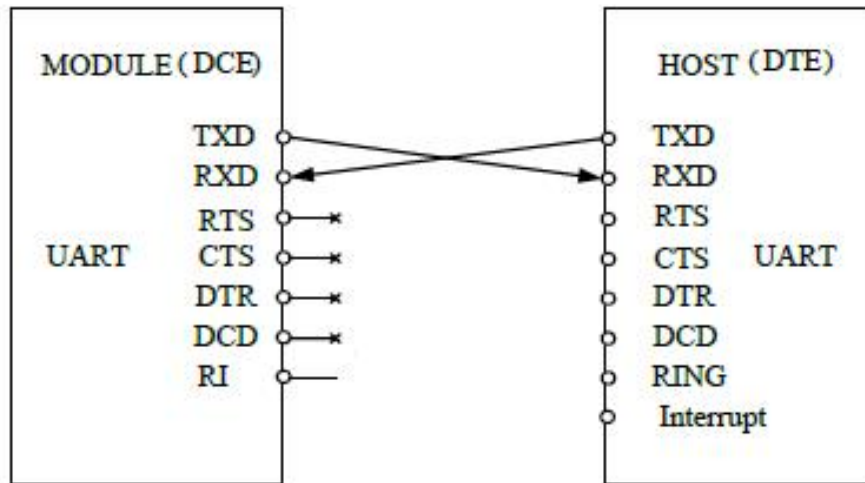

4. How to test the BK-SIM7600 by AT command via UART

4.1 Installing 3G antenna ,GPS antenna, and sim card for BK-SIM7600 Board.

4.2 Feed power supply to VCC pin, RED LED indicator will be lighted. (Note: VCC range is from 5.0V to 10V. 5.0V is recommended.)


4.3 GREEN LED indicator, Blinking shows registration successful.

NETLIGHT Pin Status	Module Status
Always On	Searching Network/Call Connect
200ms ON, 200ms OFF	Data Transmit
800ms ON, 800ms OFF	Registered network
OFF	Power off / Sleep


AND Wireless : <http://www.and-global.com>
 OEM PCBA : <http://www.buypcb.com>
 Retail Store : <http://www.aliexpress.com/store/605000>
 Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
 Email : info@and-global.com
 Tel : +86-755-28099797



4.4 Open serial software **sscom32E** and choose right serial number, Baud rate as below, please keep "SendNew" selected:

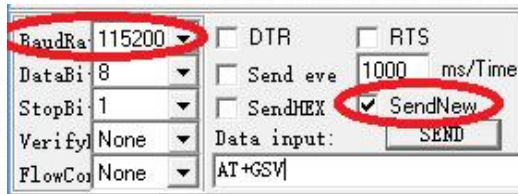

Configuration window for sscom32E. The 'BaudRa' dropdown is set to 115200. The 'SendNew' checkbox is checked. Other settings include DataBi: 8, StopBi: 1, Verify: None, FlowCo: None, DTR: unchecked, RTS: unchecked, Send eve: 1000 ms/Time, SendHEX: unchecked, Data input: SEND, and AT+GSV.

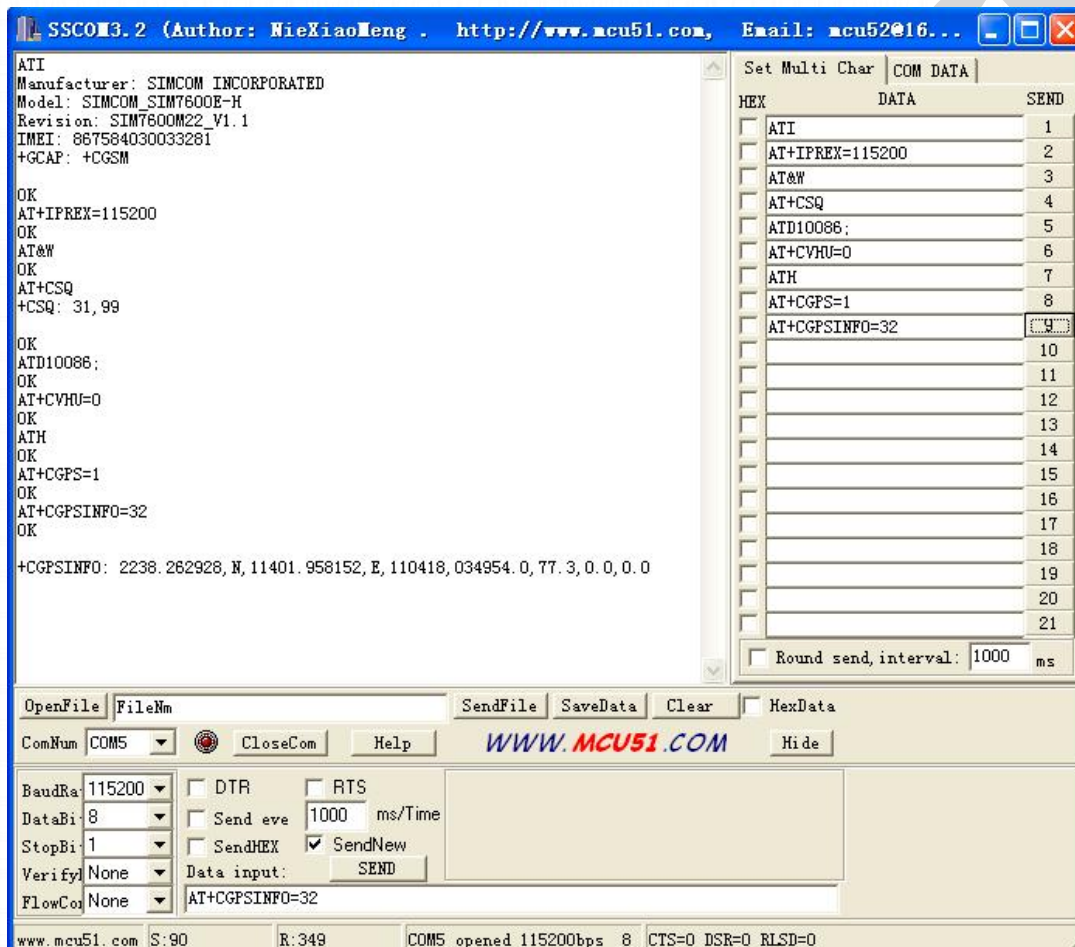

SSCOM3.2 (Author: NieXiaoMeng . <http://www.mcu51.com>, Email: mcu52@16...). The main window displays AT command results and a list of commands to send. The 'SendNew' checkbox is checked. The status bar shows: www.mcu51.com S:90 R:349 COM5 opened 115200bps 8 CTS=0 DSR=0 RLSD=0.

HEX	DATA	SEND
☐	ATI	1
☐	AT+IPREX=115200	2
☐	AT&W	3
☐	AT+CSQ	4
☐	ATD10086;	5
☐	AT+CVHU=0	6
☐	ATH	7
☐	AT+CGFS=1	8
☐	AT+CGPSINFO=32	9
☐		10
☐		11
☐		12
☐		13
☐		14
☐		15
☐		16
☐		17
☐		18
☐		19
☐		20
☐		21

5. How to test the BK-SIM7600 by AT command via USB

AND Wireless : <http://www.and-global.com>
 OEM PCBA : <http://www.buypcba.com>
 Retail Store : <http://www.aliexpress.com/store/605000>
 Golden supplier on Alibaba : <http://and-global.en.alibaba.com>
 Email : info@and-global.com
 Tel : +86-755-28099797




AND Technologies Co., Ltd

5.1 Remove all connection on CN101 7pin connector, Power up the SIM7600 Breakout board only via USB, Install SIM7100_SIM7500_SIM7600 Series Windows USB driver_V1.00.rar driver following the computer indication. The computer will show as belows, it means that the driver is installed correctly.



5.2 Select AT Port 9001, 115200bps and SendNew, you can repeat all command in Item4.4.

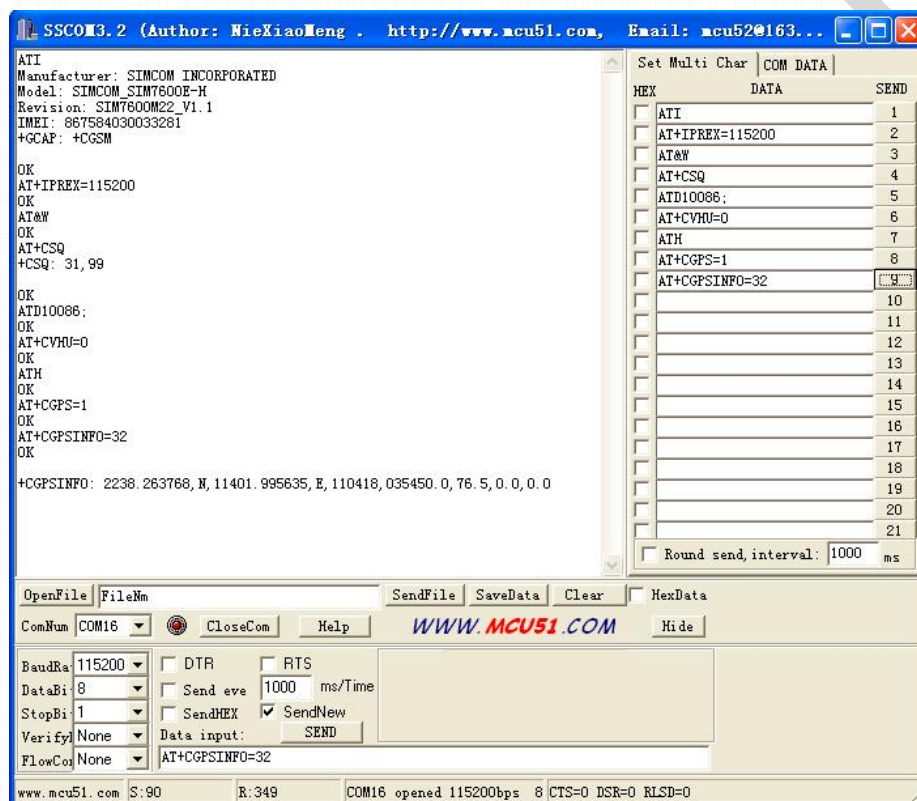

6.Package list:

Name	Qty	Unit
BK-SIM7600	1	Pcs

AND Wireless : <http://www.and-global.com>

OEM PCBA : <http://www.buypcba.com>

Retail Store : <http://www.aliexpress.com/store/605000>

Golden supplier on Alibaba : <http://and-global.en.alibaba.com>

Email : info@and-global.com

Tel : +86-755-28099797